

# QTC70(M)L-ETN



## Mounting bracket

Standard	LB24	LW24	QZ24
			
Steel	Steel	ABS	ABS
SZ24	QL24	SL24	
			
AI	ABS	AI	

## Customization


- Wall mount bracket TWS80

Wall mount bracket TWA80

Model number	Layers	Voltage	Certificates	Color
QTC70(M)L-ETN-BZ QTC70(M)L-ETN-BZ (BZ: 5 buzzer sounds)	1	DC12V DC24V AC110V-220V	CE	<div><div></div> R-Red</div>
	2	DC12V DC24V AC110V-220V		<div><div></div> R-Red</div> <div><div></div> G-Green</div>
	3	DC12V DC24V AC110V-220V		<div><div></div> R-Red</div> <div><div></div> A-Amber</div> <div><div></div> G-Green</div>
	4	DC12V DC24V AC110V-220V		<div><div></div> R-Red</div> <div><div></div> A-Amber</div> <div><div></div> G-Green</div> <div><div></div> B-Blue</div>
	5	DC12V DC24V AC110V-220V		<div><div></div> R-Red</div> <div><div></div> A-Amber</div> <div><div></div> G-Green</div> <div><div></div> B-Blue</div> <div><div></div> W-White</div>

Voltage	DC12V	DC24V	AC110V-220V
Light source current(1 layer)	0.285A	0.300A	Max.0.075A
Buzzer current	0.215A	0.245A	Max.0.055A

## Units : mm

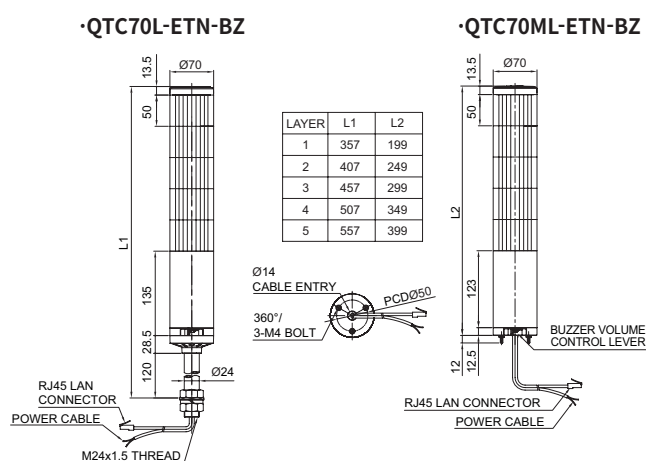

- Apply properly rated voltage through the POWER CABLE
- Connect the RJ45 connector of the UTP cable into the PC's Ethernet port or router
- External power line UL1015 AWG18(0.75sq) x 2C 400mm
- Power plug will be provided in case of AC type
- UTP cable: Category 5 cable

QTC70L-ETN-BZ	3	24	RAG	LW24
[Model number]	[Layers]	[Voltage]	[Color]	[Bracket]
QTC70L-ETN-BZ	1-1 Layers	12-DC12V	<span style="color: red;">●</span> R-Red	None-Standard
QTC70ML-ETN-BZ	2-2 Layers	24-DC24V	<span style="color: orange;">●</span> A-Amber	Bracket
QTC40L-ETN-BZ	3-3 Layers	110/220-AC110V-220V	<span style="color: green;">●</span> G-Green	-LB24 -LW24
QTC40ML-ETN-BZ	4-4 Layers		<span style="color: blue;">●</span> B-Blue	-QZ24 -SZ24
	5-5 Layers		<span style="color: grey;">○</span> W-White	-QL24 -SL24